



# Nokia C7 - 00 Touchscreen Replacement

Guide to replace touchscreen glass

Written By: Smilzo






## Step 1 — Touchscreen



- With a thin tool insert it into the bottom cover and lever to release it

## Step 2

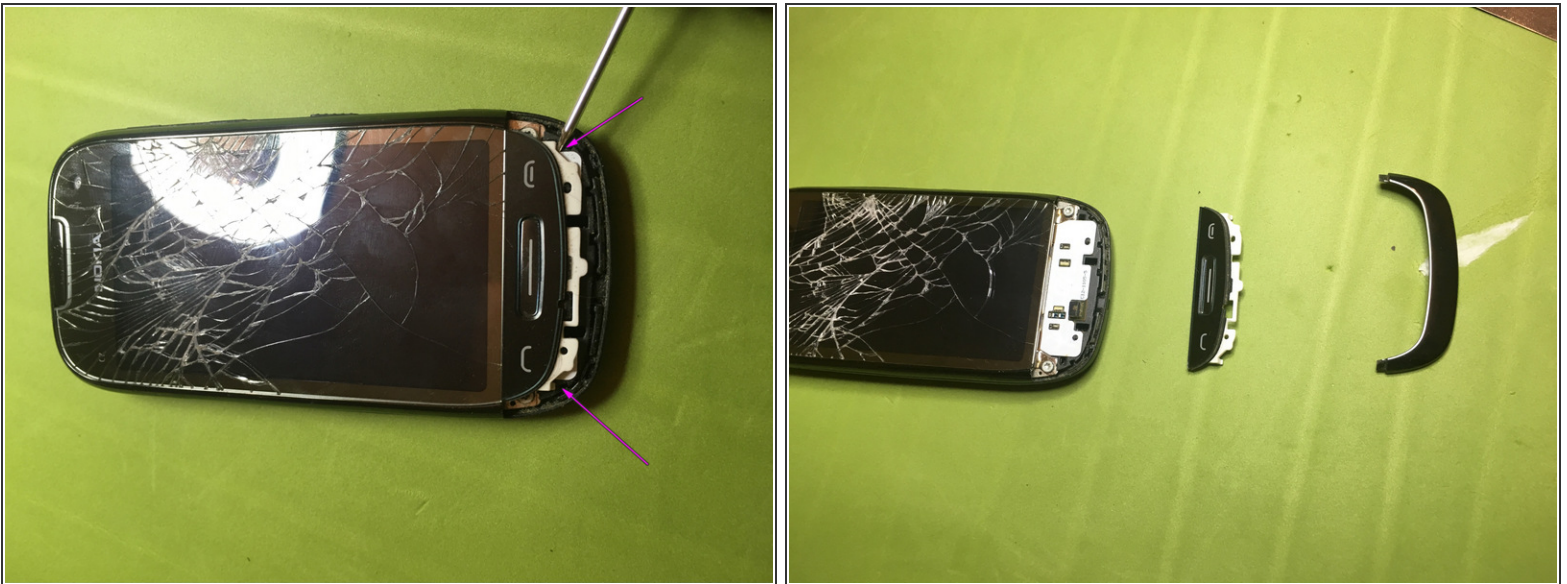


- Pry the two points indicated by the arrows to release the keyboard

## Step 3



- Remove the battery and battery cover


## Step 4

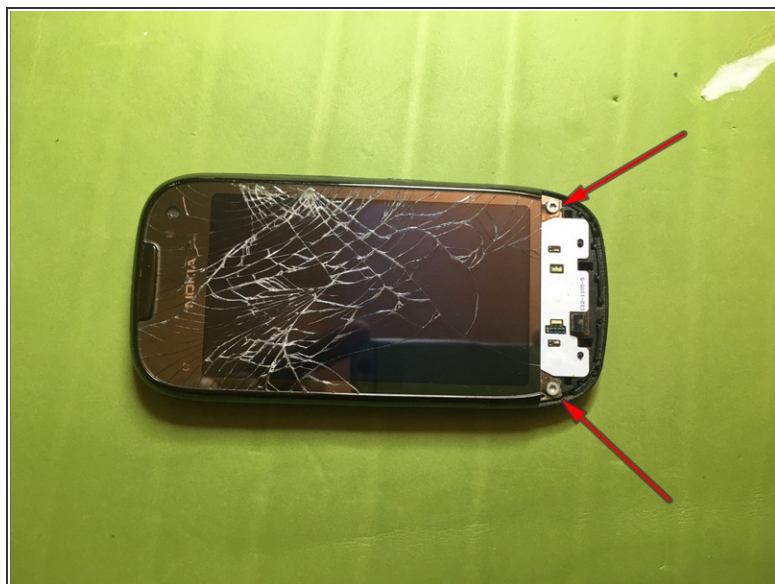

- Unscrew the two rear screws
- Unscrew the two front screws



## Step 5

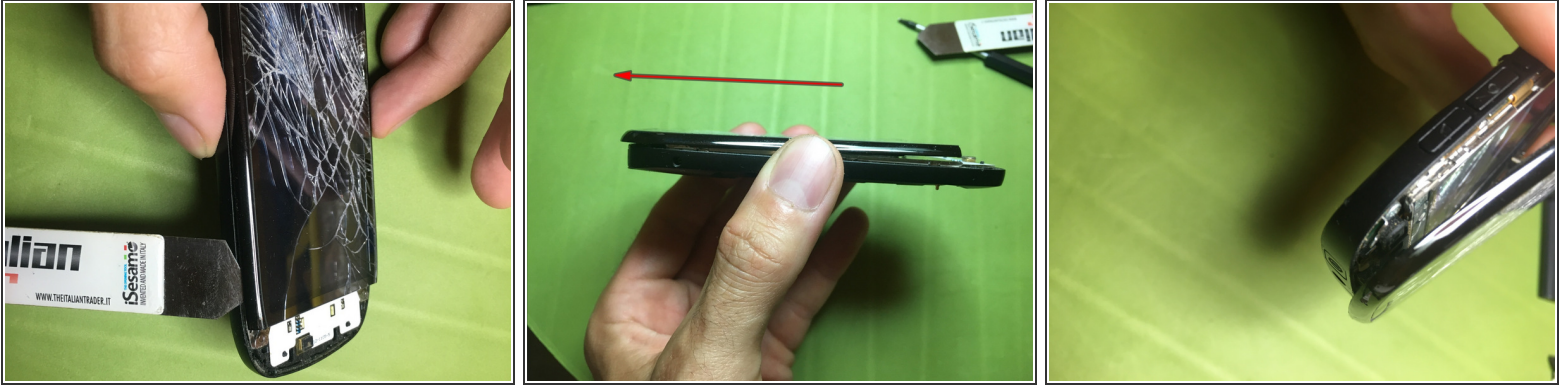

- Gently lift the front glass and slide a little in the direction of the arrow to make the release possible

## Step 6





- if the display has to be replaced and then you have no problem if it is broken in the take it off, proceed with a heat source and a thin tool to be able battered from below
- If the display is as good as in my case in order not to break it, unscrew the two screws red arrow
- Gradually unscrew the purple arrow screw so that not too forsi on the back of the display to avoid breaking it, at the same time lift it from the keyboard area and gradually loosen Dino complete lifting of the display and its housing also doing lever on the side releases

## Step 7



- Lift the display group

## Step 8

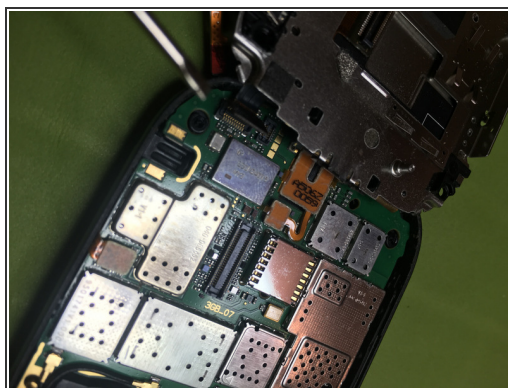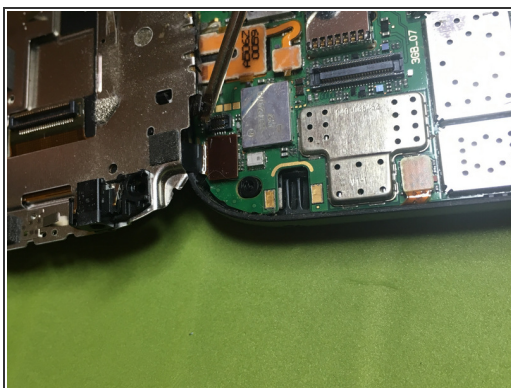

- release touch screen connector
- Unhook display connector

Per rimontare il dispositivo, segui queste istruzioni in ordine inverso.

This document was last generated on 2017-06-24 05:28:55 PM.